


CE



User's Guide

Shop online at

omega.com™

Ω OMEGA®

www.omega.com

e-mail: info@omega.com

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9002
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

PHCN-5700 pH/ORP Indicator ORP Instructions



OMEGAnet® Online Service www.omega.com	Internet e-mail info@omega.com
---	---

Servicing North America:

USA: One Omega Drive, P.O. Box 4047
ISO 9001 Certified Stamford CT 06907-0047
TEL: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada: 976 Bergar
Laval (Quebec) H7L 5A1
TEL: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGA®
Customer Service: 1-800-622-2378 / 1-800-622-BEST®
Engineering Service: 1-800-872-9436 / 1-800-USA-WHEN®
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico: En Español: (001) 203-359-7803 e-mail: espanol@omega.com
FAX: (001) 203-359-7807 info@omega.com.mx

Servicing Europe:

Benelux: Postbus 8034, 1180 LA Amstelveen, The Netherlands
TEL: +31 (0)20 3472121 FAX: +31 (0)20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: nl@omega.com

Czech Republic: Rudé armády 1868, 733 01 Karviná 8
TEL: +420 (0)69 6311899 FAX: +420 (0)69 6311114
Toll Free: 0800-1-66342 e-mail: czech@omega.com

France: 9, rue Denis Papin, 78190 Trappes
TEL: +33 (0)130 621 400 FAX: +33 (0)130 699 120
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

Germany/Austria: Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
TEL: +49 (0)7059 9398-0 FAX: +49 (0)7056 9398-29
Toll Free in Germany: 0800 639 7678
e-mail: germany@omega.com

United Kingdom: One Omega Drive, River Bend Technology Centre
ISO 9002 Certified Northbank, Irlam, Manchester
M44 5EX United Kingdom
TEL: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: 0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient-connected applications.




CAUTION!

- Refer to instruction manual for more details.
- Remove power to unit before wiring input and output connections.
- Follow instructions carefully to avoid personal injury.

Contents

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Power Connections 2. Compatible Electrode/Preamp Wiring 3. 4 - 20 mA Current Output Connections 4. Relay Connections 5. Relay Operation | <ol style="list-style-type: none"> 6. Menu Functions 7. Parts and Accessories 8. Specifications 9. Quick Reference Menu Parameters 10. Troubleshooting 11. Maintenance |
|--|--|

Remove terminal blocks for easy wiring

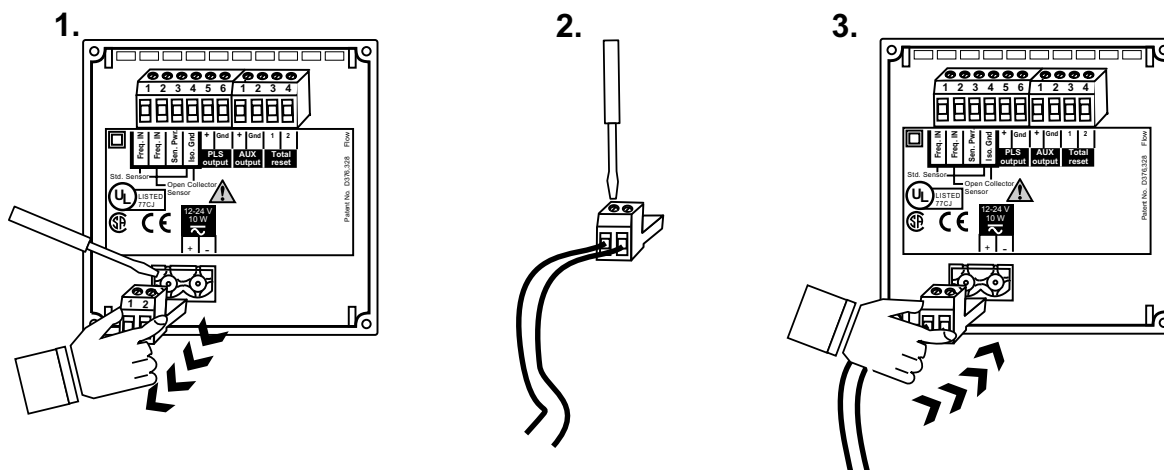


1. Power Connections



CAUTION!


Never connect 110 VAC or 220 VAC to rear power terminals. High voltage AC will damage instrument and void warranty.

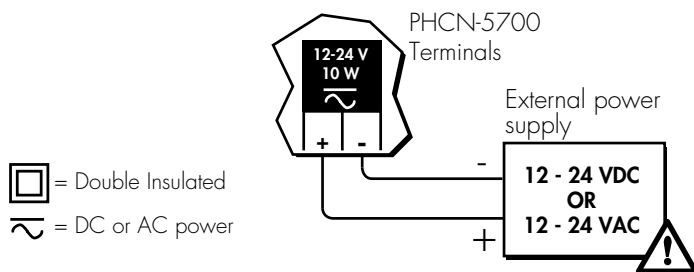

Technical Notes:

- To reduce the possibility of noise interference, isolate AC power lines from signal lines.
- Maximum 4-20 mA loop impedance (sec. 3) is affected by the supply voltage.

2. Compatible Electrode/Preamp Wiring

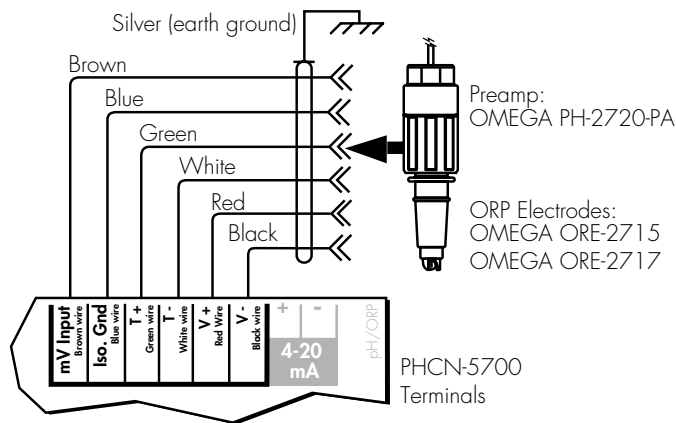

Technical Notes:

- Use six conductor shielded cable for cable extensions up to 120 m (400 ft) max.
- Cable shield must be maintained through cable splice


3. 4 - 20 mA Current Output Connections

To isolate output and prevent ground loop problems:

1. Use monitor device with isolated inputs, or
2. Use separate DC supply for PHCN-5700 and monitor device, or
3. Power PHCN-5700 with 12 - 24 VAC step down transformer

Technical Notes:

- * * 1/8A fuse recommended (customer supplied)
- * 4-20 mA output is **internally powered** (non-isolated), maximum loop impedance 350 Ω with a 12 V instrument supply voltage, 950 Ω with a 24 V instrument supply voltage.

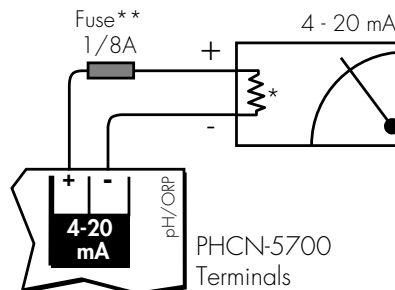


4. Relay Connections

Two internal relay contact sets (COM, NO, and NC) may be used for external device control. Front panel LED annunciators indicate the activation status of each relay. Each relay can control up to two devices simultaneously, as shown. Relay operation modes include Low alarm, High alarm, and Proportional Pulse (sec. 5).

Common device connections include:

- Pulse mode - metering pump control
- Pulse mode - solenoid valve control
- Low or High mode - warning lamps
- Low or High mode - bells or sirens
- Low or High mode - external heavy-duty relay

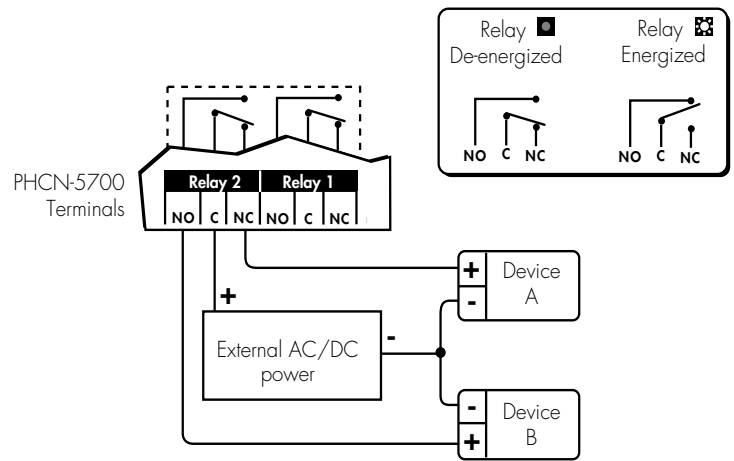

Wiring Example Right

Device A **IS** powered when relay 2 is de-energized (front panel LED "off"). Power is discontinued when the relay 2 setpoint is reached (front panel LED "on"). Device B **IS NOT** powered when the relay 2 is de-energized. Power is applied after the relay 2 setpoint is reached.


Technical Notes:

- Maximum relay contact ratings: 5 A @ 30 VDC, 5 A @ 125 VAC, or 3 A @ 250 VAC
- An external heavy-duty relay must be used for devices with surge currents or operating currents that exceed the above specifications.

5. Relay Operation


A. LOW alarm mode

The relay is energized when the ORP drops below the setpoint, and is de-energized when the ORP rises above the setpoint plus hysteresis (sec. 6.3D, 6.3E).

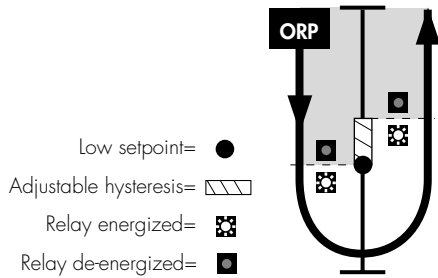

B. HIGH alarm mode

The relay is energized when the ORP rises above the setpoint and is de-energized when the ORP falls below the setpoint plus hysteresis (sec. 6.3D, 6.3E).

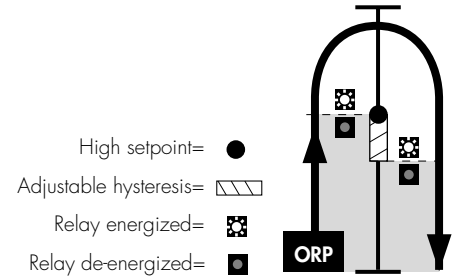


C. Proportional PULSE mode

The proportional pulse relay configuration is primarily designed for metering pump control. The operator is prompted to enter a minimum and maximum ORP setpoint and maximum pulse rate for the assigned relay (sec. 6.3F, 6.3G). Relay pulse width is fixed at 130 ms. Refer to the operation examples below.

- Metering pump chemical addition (dry contact activation type required)


Example 1 (right):

As the process ORP rises above the minimum pulse setpoint (-500 mV) the relay begins pulsing; triggering the metering pump for chemical addition. As the ORP continues to rise, pulsing accelerates proportionally until the maximum programmed pulse rate of 300 pulses/minute and setpoint (+500 mV) are reached, forcing the process ORP back down to intended levels (e.g. ≤ -500 mV).

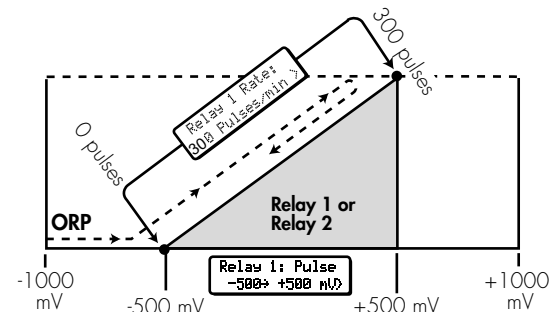


Example 2 (right):

As the process ORP falls below the minimum pulse setpoint (+500 mV) the relay begins pulsing; triggering the metering pump for chemical addition. As the ORP continues to decrease, pulsing accelerates proportionally until the maximum programmed pulse rate of 300 pulses/minute and setpoint (-500 mV) are reached, forcing the process ORP back up to intended levels (e.g. $\geq +500$ mV).

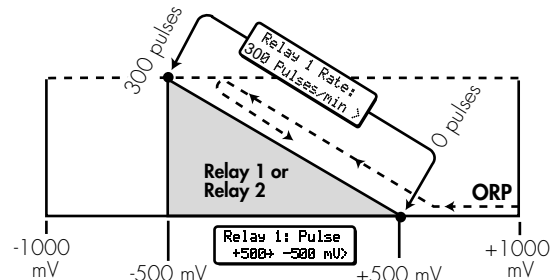

6. Menu Functions

To access either CALIBRATE or OPTIONS menus, press and hold the ENTER key as illustrated below:

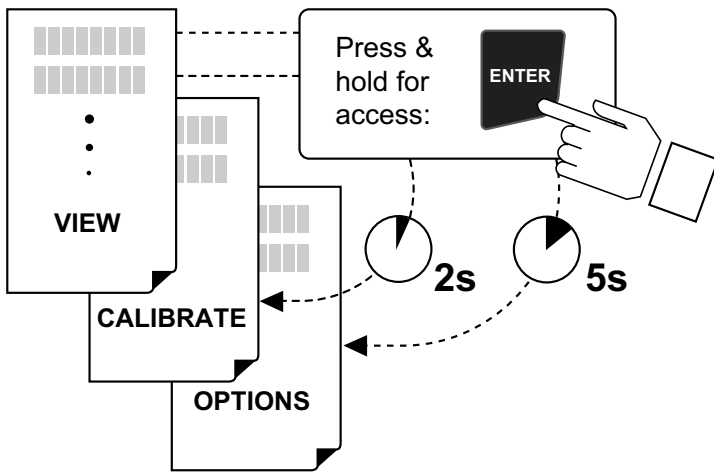


Menus:

- **VIEW menu (sec. 6.1):** The VIEW menu is displayed during standard operation. The operator can navigate freely through the menu by pressing either UP or DOWN arrow keys.
- **CALIBRATE Menu (sec. 6.3):** The CALIBRATE menu contains all critical display setup and output parameters. A simple security code feature prevents unauthorized tampering. The operator is required to enter a simple access code for menu access. The same code also unlocks OPTIONS menus.
- **OPTIONS Menu (sec. 6.4):** The OPTIONS menu contains setup and display features that are seldom accessed for minor display or output adjustments.

Reversible Dial

Your 5700 includes a reversible dial face for pH use. See enclosed pH manual for operation details.

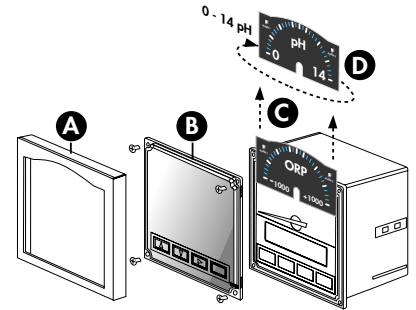

6.1 VIEW Menu

1 Choose:	2 Change:	3 Save:
<p>↓G ▲</p> <p>ORP: +87 mV</p> <p>A. Input: +84 mV</p> <p>ORP mV/Raw mV</p> <p>▲ ▼</p> <p>B. LOOP Output: 12.69 mA</p> <p>Loop output</p> <p>▲ ▼</p> <p>C. Min→Max: mV</p> <p>-1000 → +1000</p> <p>Range</p> <p>▲ ▼</p> <p>D. Relay 1: Low</p> <p>-500 mV</p> <p>Relay 1</p> <p>▲ ▼</p> <p>E. Relay 2: High</p> <p>+500 mV</p> <p>Relay 2</p> <p>▲ ▼</p> <p>F. Last CAL: 01-01-98</p> <p>Last calibration</p> <p>▲ ▼</p> <p>G. EASY CAL: ></p> <p>Buffer calibration</p> <p>▲ ▼</p>		<p>Press and release to access EASY CAL Procedure</p>

See EASY CAL Procedure (Section 6.2)

Menu Displays A - G:













(Factory default displays shown in menu column 1)

- A. Shows calibrated solution ORP mV and Raw (uncalibrated) input mV from ORP electrode/preamplifier
- B. Loop output display: shows the loop current output level.
- C. ORP range display: shows the programmed min and max meter range (sec. 6.3A)
- D. Relay 1 display: this display shows the programmed operation mode and setpoint for relay 1 (sec. 6.3D-E)
- E. Relay 2 display: this display shows the programmed operation mode and setpoint for relay 2 (sec. 6.3D-E)
- F. Last calibration: this display shows a user defined setup date for maintenance records. This feature is not an internal timer or calendar.
- G. EASY CAL: press the right arrow key to access the EASY CAL buffer calibration procedure (sec. 6.2).

6.2 EASY CAL Procedure

Requirements

- This procedure simplifies system calibration using standard pH 4.0 and 7.0 buffers **saturated with Quinhydrone** (customer supplied). If standard pH 4.0 and 7.0 buffers and Quinhydrone are not available, the system can be calibrated using the CALIBRATE menu standard and slope settings (sec. 6.3B, 6.3C).
- Quinhydrone (customer supplied) is the oxidizer measured by the ORP electrode and is essential for EASY CAL calibration. To guarantee saturation with pH 4.0 and 7.0 buffers, mix 1/8 g (1/4 mL) of Quinhydrone powder for each 50 mL of pH buffer solution (sec. 7).

EASY CAL: ---- Press keys in sequence     to continue, Enter Key Code **** will appear during code entry.		
1 To Calibrate:	2 Response:	3 To Accept:
<p>Place Sensor in ORP Buffer #1</p> <p>Place electrode tip in first pH buffer saturated with Quinhydrone;</p> <p>pH 7.0 ≈ 87 mV pH 4.0 ≈ 264 mV</p> 	<p>✱ ORP: + 84 mV Input: + 82 mV</p> <p>Allow for stabilization</p>  <p>30 seconds*</p>	<p>✱ ORP: + 84 mV Input: + 82 mV</p> <p>Press  to accept first buffer calibration.</p> <p>ORP: + 84 mV Input: + 82 mV</p> 
<p>Place Sensor in ORP Buffer #2</p> <p>Place electrode tip in second (different) pH buffer saturated with Quinhydrone;</p> <p>pH 4.0 ≈ 264 mV pH 7.0 ≈ 87 mV</p> 	<p>✱ ORP: +262 mV Input: +260 mV</p> <p>Allow for stabilization</p>  <p>30 seconds*</p>	<p>✱ ORP: +262 mV Input: +260 mV</p> <p>Press  to accept second buffer calibration.</p> <p>ORP: +262 mV Input: +260 mV</p> <p>Display returns to VIEW Menu in 3s</p>
<p>To exit EASY CAL at any time without saving changes:</p>  quick press		

Displayed Data

- ORP mV: Shows the calibrated solution oxidation reduction potential (ORP).
- Input mV: Shows the actual Raw (uncalibrated) preamplifier ORP electrode input

* For best results, gently stir the submerged electrode for approximately 5 seconds during the stabilization period (step 2).

Technical Note:

The differences between input mV and ORP mV is a good indication of the electrode's condition. Differences in excess of 50 mV may indicate a need to service the electrode. Refer to electrode manual for maintenance recommendations.

6.3 CALIBRATE Menu

Requirements

System calibration is possible with two known ORP solutions within -1000 mV - +2000 mV. The EASY CAL procedure (sec. 6.2) is recommended when standard pH buffers and Quinhydrone are available. If EASY CAL is performed, manual calibration steps B - C below are not required and should be skipped.

CALIBRATE: ---- Enter Key Code		Press keys in sequence to continue, **** will appear during code entry.		
1 Choose:	2 Change:	3 Save:		
A. Min→Max: mV -1000 → +1000 > Range	Min→Max: mV -1000 → +1000 Meter min→max	Min→Max: mV -0800 → +0800		
B. Set Standard: > Electrode standard	Input: +0084 mV ORP: +0085 mV Allow for stabilization	Input: +0084 mV ORP: +0087 mV		
C. Set Slope: Electrode slope	Input: +0260 mV ORP: +0262 mV Allow for stabilization	Input: +0260 mV ORP: +0264 mV		
Relay Low or High Mode Selected				
D. Relay 1: Low -500 mV> Relay	Relay 1: [Low] -0500 mV Mode Setpoint	Relay 1: Low -0400 mV	 "SAVING" briefly displays	
E. Relay 1 Hys: 10 mV> Relay	Relay 1 Hys: 00010 mV Hysteresis	Relay 1 Hys: 00050 mV		
Relay Pulse Mode Selected, step D				
F. Relay 1: Pulse -500 → +500 mV> Relay	Relay 1: [Pulse] -0500 → +0500 mV Mode Range	Relay 1: Pulse -0150 → +0550 mV		
G. Relay 1 Rate: 120 Pulses/min > Relay	Relay 1 Rate: 120 Pulses/min Pulse rate	Relay 1 Rate: 025 Pulses/min		
H. Last CAL: 01-01-98 > Last calibration	Last CAL: 01-01-98 Optional	Last CAL: 02-05-98		
To return to VIEW: quick press	To restore original value: quick press			

Menu Settings A - H:

(Factory default displays shown in menu column 1)

- A. Sets Min → Max meter dial range, -1000 mV - +2000 mV (factory installed dial, -1000 mV - +1000 mV). Contact factory for custom dial configurations. **Does not effect 4 to 20 mA output**
- B. Sets electrode standard to any value from -1000 mV to +2000 mV (standard value must be ≥120 mV from slope value, step C)
- C. Sets electrode slope to any value from -1000 mV to +2000 mV (slope value must be ≥120 mV from standard value, step B)

Menu items D - G repeat for relay 2 setup.

- D. Sets relay operation mode Low or High, and ORP (mV) setpoint, -1000 mV - +2000 mV (sec. 5A-B)
- E. Sets relay hysteresis, 00000 - 02000 mV. Set to zero to disable feature (sec. 5A-B)
- F. Sets relay minimum and maximum pulse setpoint, -1000 mV - +2000 mV (sec. 5C)
- G. Sets relay pulse rate, 000 - 300 pulses/minute.
- H. Sets user defined setup date for maintenance records. This feature is not an internal timer or calendar

Quick Reference Calibration Procedures:

2-Point Quick Calibration (recommended):

1. Set solution standard (step B)
2. Set solution slope (step C)

1-Point Calibration (optional):

1. Set solution standard (step B)

6.4 OPTIONS Menu

OPTIONS: ---- Press keys in sequence **▲▲▲▼** to continue,
Enter Key Code **** will appear during code entry.


1 Choose:	2 Change:	3 Save:
A. Contrast: 3 > ▶ Contrast ▼	Contrast: 1 2 3 4 5 1 2 3 4 5 Low - - - - - High ▲▼▶	"SAVING" briefly displays
B. Set 4 mA: -1000 mV > ▶ Loop output ▼	Set 4 mA: -1000 mV 4 mA setpoint ▲▼▶	
C. Set 20 mA: +1000 mV > ▶ Loop output ▼	Set 20 mA: +1000 mV 20 mA setpoint ▲▼▶	
D. 4 mA Adjust: 4.00 mA > ▶ Loop output ▼	4 mA Adjust: 4.00 mA 4 mA adjust ▲▼▶	
E. 20 mA Adjust: 20.00 mA > ▶ Loop output ▼	20 mA Adjust: 20.00 mA 20 mA adjust ▲▼▶	
To return to VIEW: ▲▼ quick press	To restore original value: ▲▼ quick press	

Menu Settings A - E:


(Factory default displays shown in menu column 1)

- A. Selects display contrast: 5 levels
- B. Sets 4 mA setpoint: -1000 - +2000 mV. 4 mA and 20 mA setpoints are reversible
- C. Sets 20 mA setpoint: -1000 - +2000 mV. 20 mA and 4 mA setpoints are reversible
- D. Adjusts 4 mA output: 3.0 to 5.0 mA (overrides factory 4.00 mA calibration)
- E. Adjusts 20 mA output: 19 to 21 mA (overrides factory 20.00 mA calibration)


7. Parts and Accessories

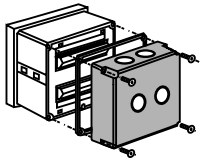

Splashproof rear cover
#FPM-5000-SBCK



5 x 5 inch adapter plate for
OMEGA retrofit #FPM-5000-RAK

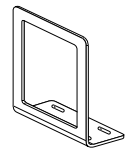

Optional surface mount
bracket #FPM-5000-MB

- pH buffers 4.0, 7.0, or 10.0, #PHA-4, #PHA-7, #PHA-10

8. Specifications

General

Compatible preamplifier: OMEGA PH-2720-PA
 Compatible sensors: OMEGA ORE-2715 or ORE-2717
 Accuracy: $\pm 0.2\%$ of full scale

Input range:

- ORP: -1000 to +2000 mV, optically isolated
(standard -1000 to +1000 mV dial included)

Enclosure:

- Rating: NEMA 4X/IP65 front
- Dimensions: 1/4 DIN, 96 x 96 x 88 mm (3.8 x 3.8 x 3.5 in.)
- Case: ABS plastic
- Keypad: Sealed 4-key silicone rubber
- Weight: Approximately 500 g (18 oz.)

Display:

- Type: Microprocessor controlled air-core meter movement and backlit Alpha-numeric 2 x 16 LCD
- Update rate: <1s
- Contrast: User selected
- Relay annunciators: 2 LEDs

Environmental

Operating temp.: -10 to 55 °C (14 to 131 °F), 50 °C (122 °F) with optional rear cover
 Storage temp.: -15 to 80 °C (5 to 176 °F)
 Relative humidity: 0 to 95%, non-condensing
 Altitude: 4000 m max.
 Pollution degree: 2

Electrical

Power requirements:

- 12 to 24 VDC or 12 to 24 VAC, unregulated, 50-60 Hz, 10 W max.

Relay contacts (2 sets):

- Mechanical SPDT contacts
- Max. voltage rating: 5 A @ 30 VDC, 5 A @ 125 VAC, or 3 A @ 250 VAC, (power factor = 1.0)
- Hysteresis: User adjustable

Current output:

- 4 to 20 mA, non-isolated, internally powered, fully adjustable and reversible
- Update rate: <1s
- Max loop impedance: 350 Ω with a 12 V instrument supply voltage, 950 Ω with a 24 V instrument supply voltage
- Accuracy: $\pm 0.1\%$ of max. range

Noise immunity: EN50082-2



Noise emissions: EN55011

Safety: EN61010-1



Agency Approvals

- CE
- Manufactured under ISO 9001

Dimensions

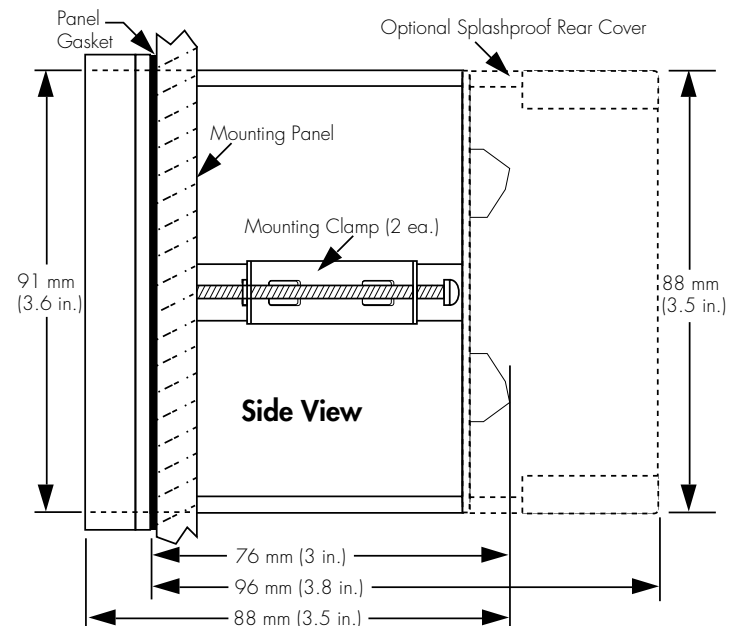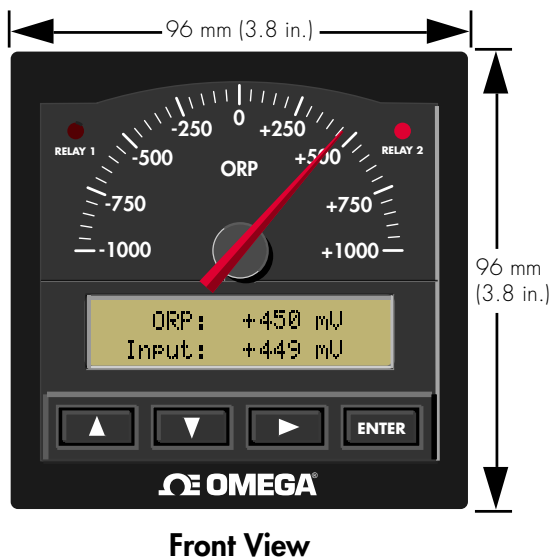

(continued)

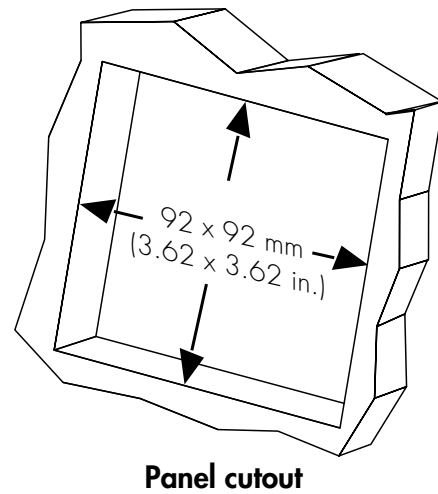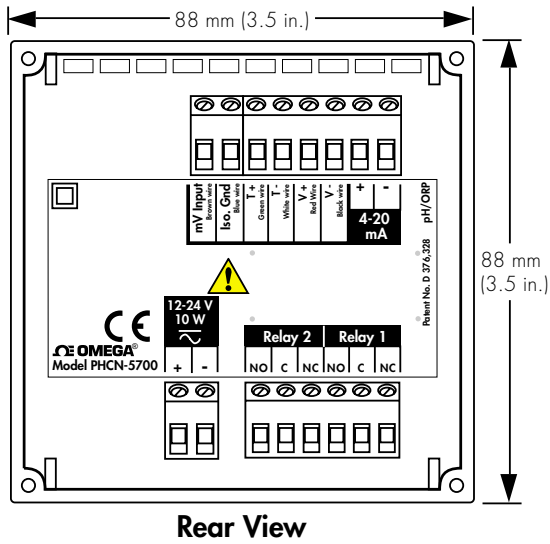

9. Quick Reference Menu Parameters

9.1 VIEW Menu Setup Parameters (sec. 6.1)

Menu Parameters	Display Description	Range	Factory Default
A. ORP: +87 mV Input: +84 mV	<ul style="list-style-type: none"> • ORP mV • Raw sensor mV 	<ul style="list-style-type: none"> • -1000 mV - +2000 mV • -1000 mV - +2000 mV 	n/a n/a
B. Loop Output: 12.69 mA	Current loop output	3 - 21 mA	n/a
C. Min→Max: mV -1000 → +1000	Min → Max meter and dial range	-1000 mV - +2000 mV	-1000 mV - +1000 mV
D. Relay 1: Low -500 mV	<ul style="list-style-type: none"> • Relay 1 mode • Relay 1 setpoint 	Low, High, or Pulse, -1000 - +2000 mV	Low -500 mV
E. Relay 2: High +500 mV	<ul style="list-style-type: none"> • Relay 2 mode • Relay 2 setpoint 	Low, High, or Pulse, -1000 - +2000 mV	High +500 mV
F. Last CAL: 01-01-98	Last calibration date	00 - 00 - 00 - 39 - 39 - 99	01 - 01 - 98
G. EASY CAL: >	EASY CAL procedure	Two pH buffers saturated with Quinhydrone required: pH 4= +87 mV, pH 7= +264 mV, (sec. 6.2)	n/a

9.2 CALIBRATE Menu Setup Parameters (sec. 6.3)

Menu Parameters	Display Description	Range	Factory Default
A. Min→Max: mV -1000 → +1000 >	Min → max meter/dial range	-1000 - +2000 mV	-1000 - +1000 mV
B. Set Standard: >	Manual electrode standard calibration	-1000 - +2000 mV	n/a
C. Set Slope:	Manual electrode slope calibration	-1000 - +2000 mV	n/a
D. Relay 1: Low -500 mV >	<ul style="list-style-type: none"> Relay 1 mode Relay 1 setpoint 	Low or High -1000 - +2000 mV	Low -500 mV
E. Relay 1 Hys: 10 mV >	Relay 1 hysteresis	00000 - 02000 mV	10 mV
F. Relay 1: Pulse -500 → +500 mV >	<ul style="list-style-type: none"> Relay 1 mode Relay 1 range 	Pulse -1000 - +2000 mV	-500 - +500 mV
G. Relay 1 Rate: 120 Pulses/min >	Relay 1 pulse rate	000 - 300 pulses/minute	120 pulses/minute
H. Last CAL: 01-01-98 >	Last calibration date	00 - 00 - 00 - 39 - 39 - 99	01 - 01 - 98

Relay mode and setpoint displays repeat for relay 2 setup

9.3 OPTIONS Menu Setup Parameters (sec. 6.4)

Menu Parameters	Display Description	Range	Factory Default
A. Contrast: 3 >	Display contrast	0 to 5	3
B. Set 4 mA: -1000 mV >	4 mA setpoint	-1000 - +2000 mV	-1000 mV
C. Set 20 mA: +1000 mV >	20 mA setpoint	-1000 - +2000 mV	+1000 mV
D. 4 mA Adjust: 4.00 mA >	4 mA adjust	3.0 to 5.0 mA	4.00 mA
E. 20 mA Adjust: 20.00 mA >	20 mA adjust	19 to 21 mA	20.00 mA

10. Troubleshooting

Display	Problem	Solution
1. 7.04 pH +25.0 °C (Example↑)	pH electrode installed in preamplifier	Remove pH electrode and replace with recommended ORP electrode (sec. 2).
2. CHECK SENSOR ?	Electrode not installed in preamplifier mV input from preamplifier out of range (≤ -1000 mV) Missing or wrong electrode identification resistance applied to rear T+ and T- terminals.	1) Verify preamplifier/electrode input connections and electrode installation (sec. 2). 2) Disconnect Green and White preamplifier wires from rear T+ and T- terminals. Measure ORP electrode identification resistance across disconnected wires for $9.0\text{ k}\Omega$ - $10.8\text{ k}\Omega$. If measured resistance is out of range: <ul style="list-style-type: none"> • Wrong electrode installed in preamplifier (pH electrode = $3\text{ k}\Omega$ @ $25\text{ }^\circ\text{C}$ ($77\text{ }^\circ\text{F}$)) • Faulty preamplifier contacts, see preamplifier manual for additional information • Faulty electrode, see electrode manual for additional information 3) To verify instrument: <ul style="list-style-type: none"> • Disconnect Green and White preamplifier wires from rear T+ and T- terminals, then install a $10\text{ k}\Omega$ fixed resistor across the terminals. • Disconnect Brown and Blue preamplifier wires from rear mV Input and Iso. Gnd terminals. Install shorting strap (jumper) across mV Input and Iso. Gnd terminals. • Power instrument and verify 0 mV on the "Input mV" display (sec. 6.3B). If 0 mV ± 5 mV are not displayed, the instrument requires factory calibration. If "Input mV" are within ± 5 mV, calibrate instrument "Set Standard" for 0 mV (sec. 6.3B). • If instrument displays correctly after calibration, instrument is ok; preamplifier and/or electrode problem exists. Refer to preamplifier and electrode manual for troubleshooting information.
3. Out Of Range Use Manual Cal	pH buffers other than pH 4 and 7 saturated with Quinhydrone used during EASY CAL procedure; pH 4= +87 mV, pH 7= +264 mV	Use pH 4 and 7 buffers (ONLY) saturated with Quinhydrone for EASY CAL procedure (sec. 6.2). The EASY CAL procedure simplifies manual Standard and Slope calibration in the CALIBRATE Menu (sec. 6). The instrument can be calibrated using two buffers of known ORP by this method (sec. 6.3B, 6.3C). If manual calibration is performed, the EASY CAL procedure is not required.
4. ! Same Buffer	Same pH buffer used for EASY CAL solution #1 and solution #2	Use different buffer saturated with Quinhydrone for EASY CAL procedure solution #1 and solution #2 (sec. 7). Do not calibrate both points with the same buffer!
5. ORP: +2000 mV Input: +2000 mV (display stuck at +2000 mV)	Excessive mV input from preamplifier	Faulty preamplifier, refer to preamplifier manual for additional information To verify instrument input: <ul style="list-style-type: none"> • Disconnect Brown and Blue preamplifier wires and install shorting strap (jumper) across rear mV input and Iso Gnd terminals. • Power instrument and verify 0 mV on display. If 0 mV is not displayed, calibrate Standard input for 0 mV (sec. 6.3B) • If instrument displays correctly after calibration, instrument is ok. If error condition persists, instrument requires factory service.

(continued)

Display	Problem	Solution
6. ! ORP must be 2000 or less	ORP (mV) input greater than +2000 mV, or improperly entered during Standard or Slope calibration	A) Use solution of known ORP within -1000 - +2000 mV range B) Enter mV value within -1000 mV - +2000 mV during standard or slope calibration (sec. 6.3B, 6.3C)
7. Slope Too Close To Standard	ORP slope calibration too close to ORP standard calibration	(CALIBRATE Menu sec. 6.3 only) Calibrate ORP slope using an ORP solution ≥ 120 mV from the ORP standard solution (sec. 6.3C).
8. Value Must Be -1000 Or More	Relay, 4 mA, or 20 mA ORP (mV) setpoint entered out of range	Enter ORP setpoint within -1000 - +2000 mV range (sec. 6.3, 6.4)
9. Value Must Be 2000 Or Less	Relay, 4 mA, or 20 mA ORP (mV) setpoint entered out of range	Enter ORP setpoint within -1000 - +2000 mV range (sec. 6.3, 6.4)
10. Value Must Be 300 Or Less	Relay pulse setting greater than 300 pulses per minute	Enter relay pulse setting within 0 - 300 pulses per minute (sec. 6.3F)
11. SETUP READ ERROR Press any Key	Power fault occurred while saving setup menu entry	Press any key to reload factory defaults then reprogram system setup parameters.

11. Maintenance

Clean the instrument case and front panel with a soft cloth and a mild soap solution.

Notes:



WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2000 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

Shop online at www.omega.com

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments