


User's Guide



*<http://www.omega.com>
e-mail: info@omega.com*

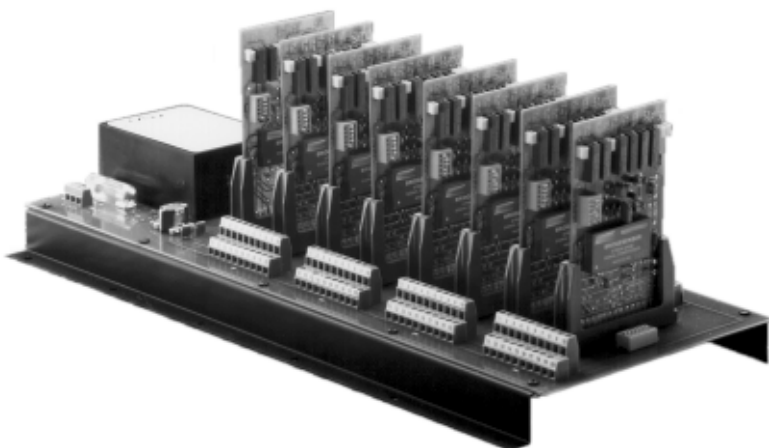

OM2-8608 Backplane



OMEGAnet® On-Line Service http://www.omega.com	Internet e-mail info@omega.com
--	---

Servicing North America:

USA:
ISO 9001 Certified

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Tel: (203) 359-1660 FAX: (203) 359-7700
e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec) H7L 5A1
Tel: (514) 856-6928 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:

USA and Canada: Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK: 62968934 CABLE: OMEGA

Mexico and Latin America:

Tel: (95) 800-826-6342 FAX: (95) 203-359-7807
En Español: (95) 203-359-7803 e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Postbus 8034, 1180 LA Amstelveen, The Netherlands
Tel: (31) 20 6418405 FAX: (31) 20 6434643
Toll Free in Benelux: 0800 0993344
e-mail: nl@omega.com

Czech Republic:

ul. Rude armady 1868, 733 01 Karvina-Hranice
Tel: 420 (69) 6311899 FAX: 420 (69) 6311114
Toll Free: 0800-1-66342
e-mail: czech@omega.com

France:

9, rue Denis Papin, 78190 Trappes
Tel: (33) 130-621-400 FAX: (33) 130-699-120
Toll Free in France: 0800-4-06342
e-mail: france@omega.com

Germany/Austria:

Daimlerstrasse 26, D-75392 Deckenpfronn, Germany
Tel: 49 (07056) 3017 FAX: 49 (07056) 8540
Toll Free in Germany: 0130 11 21 66
e-mail: info@omega.de

United Kingdom:

ISO 9002 Certified

One Omega Drive, River Bend Technology Centre
Northbank, Irlam, Manchester
M44 5EX, England
Tel: 44 (161) 777-6611 FAX: 44 (161) 777-6622
Toll Free in the United Kingdom: 0800-488-488
e-mail: info@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, patient-connected applications.

Features

- Eight Printed Circuit Card Edge Connectors
- 0.156" Pin Spacing
- AC or DC Operation
- Screw Clamp Terminal Blocks
- On Board Noise Filters

Description

The OMEGA OM2-8608 Backplane is a convenient mounting system for up to eight signal conditioners, alarms and/or controls. The backplane measures 7.5" x 16.5" and can be mounted into a variety of standard 19" relay rack enclosures. All connections are easily made with a screwdriver. The screw terminal blocks will accept AWG wire sizes 22 to 16.

The OM2-8608 board is available with either an AC line or a DC input power supply. The AC line model is available with either 100, 115, 220, 230 or 240 Volt 50/60 Hz input. The DC option is available for 10 to 36 Volts DC input or 24 to 72 Volts DC. For noise suppression, power supply input and output common mode choke filters are on the DC models and a common mode choke filter is on the output of the AC model.

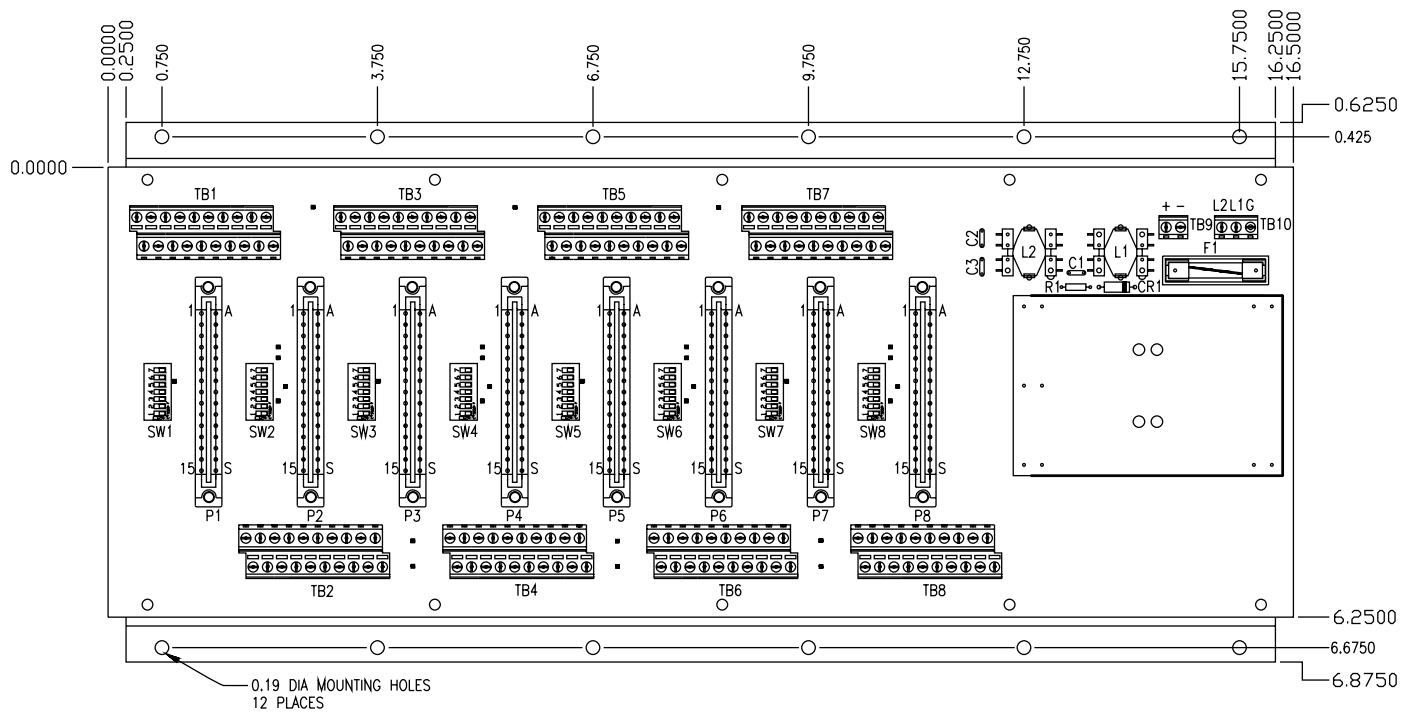


Figure 1.

Notes: Unless Otherwise Specified

1. This drawing is a dimensional reference document to be used as an aid for locating mounting holes.
2. Mounting Rail is 0.050 thick.

Specifications

Model	OM2-8608-24DC	OM2-8608-48DC	OM2-8608-115AC	OM2-8608-23AC
Input Range	10-38VDC	24-72VDC	115 VAC	230 VAC
Power Supply	24D15.400	48D15.400	2.15.350-115	2.15.350-230
Frequency			50/60 Hz	50/60 Hz
Temperature	Operating 0°C to +55°C			
Size	7.5" W x 16.5" L x 6.2" H			
Weight	1 lb. 6 oz.	1 lb. 6 oz.	3.018 lbs.	3.018 lbs.

Note: State the desired input voltage range when ordering.

DC Operation

The DC input models use a DC/DC converter to provide the ± 15 Volt power for all eight channels. The input power supply negative lead is tied to the 8610 ± 15 Volt common bus through a 1 megohm resistor and a 0.1 μ F/100V capacitor. Input and output common mode filters are provided on the board to limit high frequency noise. The positive input is fused with a slow blow fuse and has a series diode to prevent damage from reverse polarity.

Eight Model OM2-8608 each driving a 350 ohm bridge with 10 volts excitation will draw about 353 mA from the +15 Volt supply and 13 mA from the negative 15 Volt supply. This will load the DC/DC converter to about 46% of its 12 Watt rating and the input current for the 24 VDC will be approximately as follows:

Input Voltage	Current
10	0.75 Amp
12	0.60 Amp
18	0.40 Amp
24	0.30 Amp
36	0.20 Amp

Below 10 Volts input, the converter will continue to operate and the input current will rise above 1 Amp before the current begins to decrease. See the 24D INPUT CURRENT Vs LINE INPUT (Figure 3). Note from the curves that it is possible for an under rated input power source to lock up at a voltage too low to operate the DC/DC converter. Also note that the series diode is rated for 1.5 Ampere and that a fully loaded 24D15.400 will draw close to 2.5 Amp as the input voltage drops below 10 Volts. Hence operation at full load and low line should be avoided.

The input power source can have 120 Hertz ripple up to 1 Volt peak to peak at 10 Volts and 2 Volts peak to peak above 12 Volts input.

The 8608 is also available with a 48 Volt converter which operates from 24 to 72 Volts input. The input currents will be proportionally less. See the 48D INPUT CURRENT Vs LINE INPUT (Figure 3).

OM2-8608 Backplane Pin Out for -15 VDC			
Model	Switch 6	Switch 7	Pin
OM2-160	off	ON	E
OM2-161	ON	off	C
OM2-165	off	ON	E

FIGURE 2.

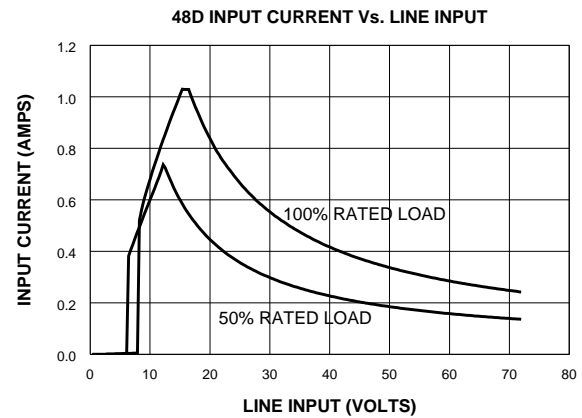
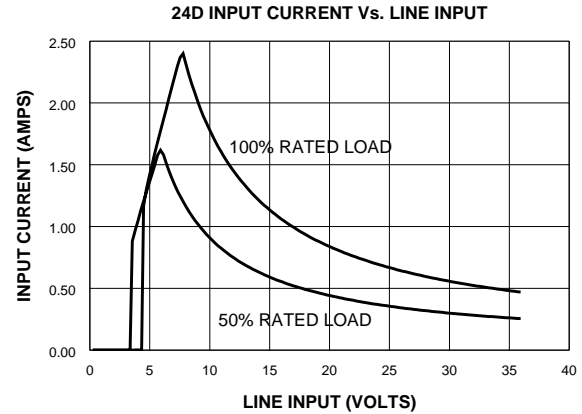


FIGURE 3.

Wiring Tips

Two terminals on each of the screw terminal blocks are tied to the common bus for connection to shields or other points that must be connected to signal common. The positive 15 Volt supply is tied to pin A on all eight card connectors.

The power supply common, which is also the signal common, is connected to pin B. The negative 15 Volt supply is brought out to each dip switch at switch 6 and 7. This allows the connection of the -15 Volts to either pin C or Pin E of the card edge connector, which is required for most Instrumentation Modules. See figure 2 for which pin and OMEGA Modules require -15 Volts.

Edge Connector & Dip Switch

Dip switches 1 - 5 either short or open connections between the edge connector to convert it from a 15 pin connector to a 30 pin connector, which the OM2-161 Bridgesensor requires. With switches 1 - 5 ON, the edge connector is configured as a 15 pin connector for all OMEGA Mounting Kits with the exception of the OM2-161 Bridgesensor (See figure 4). With switches 1 - 5 OFF, the edge connector is configured as a 30 pin connector for the OM2-161 Bridgesensor (See figure 5).

Pin Assignments (Dip Switches 1 - 5 ON)			
Terminal Block Pin	Edge Connector Pin	Terminal Block Pin	Edge Connector Pin
1	C	11	B = CMN
2	D	12	K
3	D	13	L
4	E	14	M
5	F	15	N
6	H	16	P
7	H	17	R
8	J	18	R
9	K	19	S
10	B = CMN	20	S

FIGURE 4.

Pin out Assignments for All OMEGA Modules except the OM2-161.

Pin Assignments (Dip Switches 1-5 OFF)		
Terminal Block Pin	Edge Connector Pin	Jumper Wire Via Dip Switch
1	C & 3	
2	D	Dip Switch 1 ON will short D & 4
3	4	
4	E & 5	
5	F & 6	
6	H	Dip Switch 2 ON will short H & 7
7	7	
8	J & 8	
9	K	Dip Switch 3 ON will short K & 9
10	B & 2 = CMN	
11	B & 2 = CMN	
12	9	Dip Switch 3 ON will short K & 9
13	L & 10	
14	M & 11	
15	N & 12	
16	P & 13	
17	R	Dip Switch 4 ON will short R & 4
18	14	
19	S	Dip Switch 5 ON will short S & 15
20	15	

FIGURE 5.

Pin out Assignments for OM2-161

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal one (1) **year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY / DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. **BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS).** The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number under which the product was **PURCHASED**,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available **BEFORE** contacting OMEGA:

1. Purchase Order number to cover the **COST** of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

©Copyright 1999 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? OMEGA...Of Course!

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducer & Strain Gauges
- ☑ Load Cells & Pressure Gauges
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Datalogging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL

MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments