


®  **CDH-280-KIT**

®  **Conductivity Meter**



Operator's Manual



Servicing USA and Canada: Call OMEGA Toll Free

USA

One Omega Drive, Box 4047
Stamford, CT 06907-0047
Telephone: (203) 359-1660
FAX: (203) 359-7700

Canada

976 Bergar
Laval (Quebec) H7L 5A1
Telephone: (514) 856-6928
FAX: (514) 856-6886

Sales Service: 1-800-826-6342 / 1-800-TC-OMEGASM
Customer Service: 1-800-622-2378 / 1-800-622-BESTSM
Engineering Service: 1-800-872-9436 / 1-800-USA-WHENSM
TELEX: 996404 EASYLINK: 62968934 CABLE OMEGA

Servicing Europe: United Kingdom Sales and Distribution Center

25 Swannington Road, Broughton Astley, Leicestershire
LE9 6TU, England
Telephone: 44 (0455) 285520 FAX: 44 (0455) 283912

The OMEGA Complete Measurement and Control Handbooks & Encyclopedias

- ✓ Temperature
- ✓ Pressure, Strain & Force
- ✓ Flow and Level
- ✓ pH and Conductivity
- ✓ Data Acquisition Systems
- ✓ Electric Heaters
- ✓ Environmental Monitoring and Control



Call for Your FREE Handbook Request Form Today: (203) 359-RUSH

TABLE OF CONTENTS

CDH-280-KIT

SECTION	DESCRIPTION	PAGE
1	Introduction	1
	Description	1
	Unpacking	1
	Installing the battery	2
	Instrument test procedure	3
2	Calibration and Measurement	4
3	Troubleshooting	5
4	Accessories	6
5	Specifications	7
-	Appendix 1: Cell Constants	8
-	Appendix 2: Calibration Solutions	9

SECTION 1

Introduction

Description

The OMEGA® CDH-280-Kit Conductivity Meter is a simple-to-use, portable, battery-operated instrument. The meter allows automatically temperature-compensated conductivity measurements over a wide range.

Unpacking

Remove the Packing List and verify that you have received all equipment. If you have any questions about the shipment, please call the OMEGA Customer Service Department at 1-800-622-2378 or (203) 359-1660.

When you receive the shipment, inspect the container and equipment for any signs of damage. Note any evidence of rough handling in transit. Immediately report any damage to the shipping agent.

Note

The carrier will not honor any claims unless all shipping material is saved for their examination. After examining and removing contents, save packing material in the event that re-shipment is necessary.

The following items are packed in the box:

- CDH-280 Conductivity Meter
- Conductivity cell, $K=1/\text{cm}$
- Carrying case
- 9V Battery
- Operator's Manual

Setting Up

Battery Replacement

REFER TO FIGURE 1

- The instrument is supplied with a 9V battery.
- The battery will afford the user approximately 35 hours of continuous use. When the battery needs changing, the word BAT will appear on the display.
- To install or replace the battery slide the back cover off.
- Remove the old battery and insert a new one making sure that the polarity orientation is correct.
- Replace back cover.

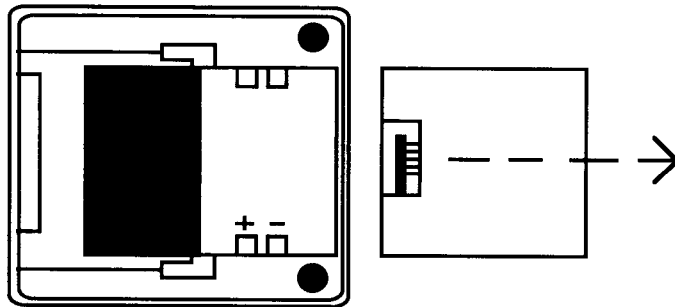


Figure 1. Battery Installation

SECTION 2

Calibration and Measurement

For accurate results always rinse the cell in de-ionized water and blot dry when transferring from one solution to another to prevent contamination. Use a calibration solution with a conductivity as close to that of the sample as possible.

REFER TO FIGURE 2

- ❶ Connect the cell to the meter and switch on using the ON/OFF switch.
- ❷ Select the range that is most appropriate for the calibration solution in use. e.g. for 0.01M KCl, which has a conductivity of $1413\mu\text{S}/\text{cm}$ ($1.413\text{mS}/\text{cm}$) at 25°C , select the $2\text{mS}/\text{cm}$ range.
- ❸ Place the cell in the calibration solution and wait for the reading to stabilize. (Gentle stirring may be necessary to permit any trapped air in the probe to escape).
- ❹ When the reading is stable, adjust the value to that of the standard using a screwdriver to turn the calibration screw on the side of the meter.
- ❺ Transfer the cell to the sample and record the stabilized reading.

SECTION 3

Troubleshooting

Symptom	Probable Cause(s)
No Display	- Battery is flat or not installed
“BAT” flag displayed	- Battery is low
Display reads zero	- Cell disconnected
	- Cell not immersed in solution
	- Cell in non-ionic solution
	- Cell is open circuit
Display shows '1' in left hand digit (Over-range condition)	- Wrong range selected
	- Solution outside range of instrument ($>200\text{mS/cm}$)
Drifting readings	- Sample temperature changing
	- Cell contaminated.
Erratic/drifting readings or display reads -- on left hand side when calibration plug is attached	- Return meter for servicing

In the event of a malfunction, it is important to pinpoint the problem to either the meter or the cell. If a spare cell is available, substitute it for the one in use.

There are no user serviceable parts in this instrument. Please ensure that the instrument, together with all accessories, is returned to OMEGA Engineering Inc. with a full description of the symptoms of the fault. No attempt should be made to repair the meter.

SECTION 4

Accessories

Available From OMEGA Engineering Inc.

All cells listed have automatic temperature compensation (ATC). Standard lead length is 1 meter. Other lead lengths can be made to order.

Part No	Description	Measurement	Cell	Application
Dip Type Cells				
CDE-5001-GD1	Glass Dip K=1/cm	100 μ S-100mS	platinum plates	general
CDE-5002-ED1	Polymer Dip K=1/cm	100 μ S-100mS	platinum plates	general
CDE-5004-ED10	Epoxy Dip K=10/cm	100mS-2000mS	graphite plates	industrial &field
CDE-5010-ED1	Epoxy Dip K=1/cm	100 μ S-100mS	graphite plates	industrial &field
CDE-5011-ED01	Epoxy Dip K=0.1/cm	0.01 μ S-200mS	graphite plates	industrial &field
CDE-5014-GD01	Glass Dip K=0.1/cm	0.01 μ S-100 μ S	platinum plates	pure water
CDE-5019-ED1	Epoxy Dip K=1/cm	100 μ S-100mS	graphite plates	industrial &field
Sample Cells				
CDE-5015-GS01	Glass sample K=0.1/cm	0.01 μ S-100 μ S	platinum plates	pure water
Flow Cells				
CDE-5005-GF1	Glass Flow K=1/cm	100 μ S-100mS	platinum plates	lab use
CDE-5008-EF10	Epoxy Flow K=10/cm	100mS-2000mS	graphite plates	industrial flowline
CDE-5012-EF1	Epoxy Flow K=1/cm	100 μ S-100mS	graphite plates	industrial flowline
CDE-5013-ED01	Epoxy Flow K=0.1/cm	0.01 μ S-200mS	graphite plates	industrial flowline

SECTION 5

Specifications

Conductivity	Ranges (resolution):	0 - 200 μ S/ cm (0.1) 0 - 2mS/cm (1) 0 - 20 mS/cm (10) 0 - 200mS/cm (100)
	Accuracy:	\pm 0.5% of reading
	Temperature Compensation:	0 - 50°C
	Reference Temperature:	25°C
	Temperature Coefficient:	2%/°C
	Power:	9V battery
	Instrument size:	5.7" x 3.15" x 1.52"
	Instrument weight:	0.6lb

Appendix 1

Cell Constants

Conductivity cells with different cell constants can be used to achieve greater accuracy, or used to make difficult measurements easier. Selection of the correct cell constant is dependent on the conductivity range of your sample. Conductivities of various waters and common solutions, together with the most suitable cell constants are given below.

K = 0.1/cm (K = 10.0/m)

For measurements of solutions with very low conductivity. e.g. pure water, de-mineralized water, distilled water, boiler feed water.

K = 1.0/cm (K= 100/m)

For measurements of solutions with medium conductivity, e.g. surface water, waste water, diluted salt solutions, fertilizers, electroplating rinses.

K = 10/cm (K=1000/m)

For measurements of solutions with high conductivity, e.g. strong acid, strong alkali, strong salt solutions, sea water.

In order to obtain the absolute conductivity value, multiply the displayed reading by the cell constant.

Cell Conversion Table

c.g.s units	SI units
K =1.0/cm	K = 100.0/m
K = 0.1/cm	K = 10.0/m
K = 10.0/cm	K =1000/m

Appendix 2

Calibration Solutions

1413 μ S/cm @ 25°C 0.01M KCl

°C	μ S/cm	mS/m	°C	μ S/cm	mS/m
5	896	89.6	25	1413	141.3
10	1020	102.0	26	1441	144.1
15	1147	114.7	27	1468	146.8
16	1173	117.3	28	1496	149.6
17	1199	119.9	29	1524	152.4
18	1225	122.5	30	1552	155.2
19	1251	125.1	31	1581	158.1
20	1278	127.8	32	1609	160.9
21	1305	130.5	33	1638	163.8
22	1332	133.2	34	1667	166.7
23	1359	135.9	35	-	-
24	1386	138.6	36	-	-

12.88mS/cm @ 25°C 0.1M KCl

°C	μ S/cm	mS/m	°C	μ S/cm	mS/m
5	896	89.6	25	1413	141.3
10	1020	102.0	26	1441	144.1
15	1147	114.7	27	1468	146.8
16	1173	117.3	28	1496	149.6
17	1199	119.9	29	1524	152.4
18	1225	122.5	30	1552	155.2
19	1251	125.1	31	1581	158.1
20	1278	127.8	32	1609	160.9
21	1305	130.5	33	1638	163.8
22	1332	133.2	34	1667	166.7
23	1359	135.9	35	-	-
24	1386	138.6	36	-	-

Calibration Solutions

2.765 mS/cm @ 25°C 0.02M KCl

°C	mS/cm	mS/m	°C	mS/cm	mS/m
5	1.752	175.2	25	2.765	276.5
10	1.994	199.4	26	2.819	281.9
15	2.243	224.3	27	2.873	287.3
16	2.294	229.4	28	2.927	292.7
17	2.345	234.5	29	2.981	298.1
18	2.397	239.7	30	3.036	303.6
19	2.449	244.9	31	3.091	309.1
20	2.501	250.1	32	3.146	314.6
21	2.553	255.3	33	3.201	320.1
22	2.606	260.6	34	3.256	325.6
23	2.659	265.9	35	3.312	331.2
24	2.712	271.2	36	3.368	336.8

111.8mS/cm @ 25°C 1.0 M KCl

°C	mS/cm	S/m	°C	mS/cm	S/m
5	74.14	7.414	25	111.80	11.180
10	83.19	8.319	26	113.77	11.377
15	92.52	9.252	27	115.74	11.574
16	94.41	9.441	28	-	-
17	96.31	9.631	29	-	-
18	98.22	9.822	30	-	-
19	100.01	10.014	31	-	-
20	102.07	10.207	32	-	-
21	104.00	10.400	33	-	-
22	105.54	10.554	34	-	-
23	107.89	10.789	35	-	-
24	109.84	10.984	36	-	-

Notes

WARRANTY

OMEGA warrants this unit to be free of defects in materials and workmanship and to give satisfactory service for a period of **13 months** from date of purchase. OMEGA Warranty adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that our customers receive maximum coverage on each product. If the unit should malfunction, it must be returned to the factory for evaluation. Our Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective it will be repaired or replaced at no charge. However, this WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components which wear or which are damaged by misuse are not warranted. These include contact points, fuses, and triacs.

We are glad to offer suggestions on the use of our various products. Nevertheless, OMEGA only warrants that the parts manufactured by it will be as specified and free of defects.

OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

LIMITATION OF LIABILITY: The remedies of buyer set forth herein are exclusive and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

Every precaution for accuracy has been taken in the preparation of this manual; however, OMEGA ENGINEERING, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that result from the use of the products in accordance with the information contained in the manual.

SPECIAL CONDITION: Should this equipment be used in or with any nuclear installation or activity, buyer will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the equipment in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA ENGINEERING Customer Service Department. Call toll free in the USA and Canada: 1-800-622-2378, FAX: 203-359-7811; International: 203-359-1660, FAX: 203-359-7807.

BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, YOU MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OUR CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems you are having with the product.

FOR **NON-WARRANTY** REPAIRS OR **CALL-BRATION**, consult OMEGA for current repair/calibration charges. Have the following information available BEFORE contacting OMEGA:

1. P.O. number to cover the COST of the repair/ calibration,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems you are having with the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 1994 OMEGA ENGINEERING, INC. All rights reserved. This documentation may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of OMEGA ENGINEERING, INC.

OMEGA... Your Source for Process Measurement and Control

TEMPERATURE

- Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- Wire: Thermocouple, RTD & Thermistor
- Calibrators & Ice Point References
- Recorders, Controllers & Process Monitors
- Infrared Pyrometers

PRESSURE/STRAIN FORCE

- Transducers & Strain Gages
- Load Cells & Pressure Gauges
- Displacement Transducers
- Instrumentation & Accessories

FLOW/LEVEL

- Rotameters, Gas Mass Flowmeters & Flow Computers
- Air Velocity Indicators
- Turbine/Paddlewheel Systems
- Totalizers & Batch Controllers

pH/CONDUCTIVITY

- pH Electrodes, Testers & Accessories
- Benchtop/Laboratory Meters
- Controllers, Calibrators, Simulators & Pumps
- Industrial pH & Conductivity Equipment

DATA ACQUISITION

- Data Acquisition and Engineering Software
- Communications-Based Acquisition Systems
- Plug-in Cards for Apple, IBM & Compatibles
- Datalogging Systems
- Recorders, Printers & Plotters

HEATERS

- Heating Cable
- Cartridge & Strip Heaters
- Immersion & Band Heaters
- Flexible Heaters
- Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- Metering & Control Instrumentation
- Refractometers
- Pumps & Tubing
- Air, Soil & Water Monitors
- Industrial Water & Wastewater Treatment
- pH, Conductivity & Dissolved Oxygen Instruments

M1879/0494