

User's Guide


OMEGASOFT®

Software for OMB-DAQ-2416 Series and OM-USB
Series Multi-function I/O USB Data Acquisition Modules


Rev. _____

Includes:

- InstaCal™**
Installation application
- TracerDAQ®**
Ready-to-run DAQ applications
- Universal Library™**
Windows programming libraries and components
- UL for LabVIEW™**
Drivers and examples
- Hardware/User Manuals**
and documents
- System Requirements**
Windows 2000/XP/Vista

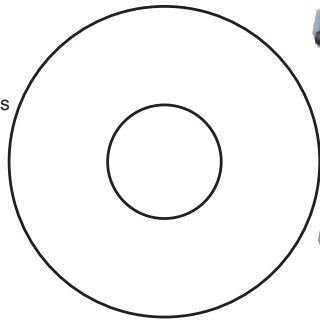

OMB-DAQ-2416

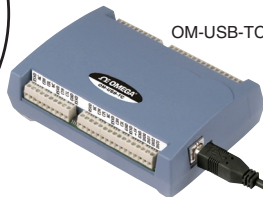

OM-USB-TC



omega.com

800-DAS-IEEE (800-327-4333)

© COPYRIGHT 2010 OMEGA ENGINEERING, INC.

Shop online at

omega.com®



omega.com

e-mail: info@omega.com

*For latest product manuals:
omegamanual.info*

ISO 9001
CERTIFIED
CORPORATE QUALITY

STAMFORD, CT

ISO 9001
CERTIFIED
CORPORATE QUALITY

MANCHESTER, UK

SOFTWARE FOR OMB-DAQ-2416 SERIES And OM-USB SERIES Universal Library Redistribution Guide



OMEGAnet® Online Service
omega.com

Internet e-mail
info@omega.com

Servicing North America:

U.S.A.:
ISO 9001 Certified

Omega Engineering, Inc., One Omega Drive, P.O. Box 4047
Stamford, CT 06907-0047 USA
Toll Free: 1-800-826-6342 TEL: (203) 359-1660
FAX: (203) 359-7700 e-mail: info@omega.com

Canada:

976 Bergar
Laval (Quebec), H7L 5A1 Canada
Toll-Free: 1-800-826-6342 TEL: (514) 856-6928
FAX: (514) 856-6886 e-mail: info@omega.ca

For immediate technical or application assistance:

U.S.A. and Canada: Sales Service: 1-800-826-6342/1-800-TC-OMEGA®
Customer Service: 1-800-622-2378/1-800-622-BEST®
Engineering Service: 1-800-872-9436/1-800-USA-WHEN®

**Mexico/
Latin America:**

En Español: 001 (203) 359-7803 FAX: 001 (203) 359-7807
info@omega.com.mx e-mail: espanol@omega.com

Servicing Europe:

Benelux:

Managed by the United Kingdom Office
Toll-Free: 0800 099 3344 TEL: +31 20 347 21 21
FAX: +31 20 643 46 43 e-mail: sales@omegaeng.nl

Czech Republic:

Frystatska 184
733 01 Karviná, Czech Republic
Toll-Free: 0800-1-66342 TEL: +420-59-6311899
FAX: +420-59-6311114 e-mail: info@omegashop.cz

France:

Managed by the United Kingdom Office
Toll-Free: 0800 466 342 TEL: +33 (0) 161 37 29 00
FAX: +33 (0) 130 57 54 27 e-mail: sales@omega.fr

Germany/Austria:

Daimlerstrasse 26
D-75392 Deckenpfronn, Germany
Toll-Free: 0800 6397678 TEL: +49 (0) 7056 9398-0
FAX: +49 (0) 7056 9398-29 e-mail: info@omega.de

United Kingdom:
ISO 9001 Certified

OMEGA Engineering Ltd.
One Omega Drive, River Bend Technology Centre, Northbank
Irlam, Manchester M44 5BD United Kingdom
Toll-Free: 0800-488-488 TEL: +44 (0) 161 777-6611
FAX: +44 (0) 161 777-6622 e-mail: sales@omega.co.uk

It is the policy of OMEGA Engineering, Inc. to comply with all worldwide safety and EMC/EMI regulations that apply. OMEGA is constantly pursuing certification of its products to the European New Approach Directives. OMEGA will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct, but OMEGA accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

WARNING: These products are not designed for use in, and should not be used for, human applications.

Table of Contents

Overview.....	4
Installing the Universal Library for Windows Vista, Windows XP, and Windows 2000.....	4
Installing <i>InstaCal</i> with the Universal Library.....	6
Running a Silent <i>InstaCal</i> Installation	8
Installing Universal Library support for the .NET Framework.....	9
Tips and techniques.....	9
Digital signing.....	9
Deploying applications with devices that have serial numbers.....	9

Redistributing Applications with the Universal Library

Overview

The information in this document explains how to distribute applications developed using the 32-bit Universal Library (UL). Developers wishing to redistribute the files associated with the Universal Library and *InstaCal* may do so only if they are not altered or edited in any way.

This document includes information on how to install the Omega Engineering device drivers, Universal Library, and *InstaCal* under Windows Vista, Windows XP, and Windows 2000.

These instructions assume that Omega Engineering-specific files are installed to a directory named C:\Program Files\Omega Engineering\DAQ.

Installing the Universal Library for Windows Vista, Windows XP, and Windows 2000

This section describes explains how to install the Omega Engineering device drivers, the Universal Library, and *InstaCal* under Windows Vista, Windows XP, and Windows 2000. The general steps to install an application are:

1. Copy your application files to a directory on your system.
2. Update the registry and system files as needed by your application.
3. Create a desktop folder for your program and associated files.
4. Restart the computer, if necessary.

These instructions describe how to install the Universal Library manually, and to supply an appropriate CB.CFG for the installed Omega Engineering hardware. These instructions assume that *InstaCal* has not been installed. For instructions on installing *InstaCal*, refer to ""Installing *InstaCal* with the Universal Library" on page 6.

In addition to your application files, the following Universal Library files must be installed:

File description	File name
Universal Library Windows 2000, Windows XP, and Windows Vista device drivers	<ul style="list-style-type: none">▪ CBUL32.sys▪ CBULWDM.sys▪ pcidaqlib.sys▪ mccusb.sys▪ usbdaqlib.sys▪ usblddaqlib.sys
Universal Library DLL files	<ul style="list-style-type: none">▪ CBW32.DLL▪ DaqLib.DLL▪ mccsktsifc.dll
Omega Engineering UL support files	<ul style="list-style-type: none">▪ CBERRCODE.TXT▪ ULPROPS.TXT
Hardware configuration files	<ul style="list-style-type: none">▪ CB.CFG (created using <i>InstaCal</i>)▪ CBI95.INF▪ CBICOM.INF▪ DAQLIB.INF▪ MCCUSB.INF

In addition, the Windows system configuration must be updated to access the Universal Library.


To update the system configuration:

1. Copy CBW32.DLL, CBERCODE.TXT, ULPROPS.TXT, and DaqLib.DLL to a directory on your hard drive, such as C:\Program Files\Omega Engineering\DAQ.

2. Update the Windows registry to include the following key:

[HKEY_LOCAL_MACHINE]\Software\Universal Library\RootDir

3. Add a New String Value to the key that was just created: RootDir = C:\Program Files\Omega Engineering\DAQ.

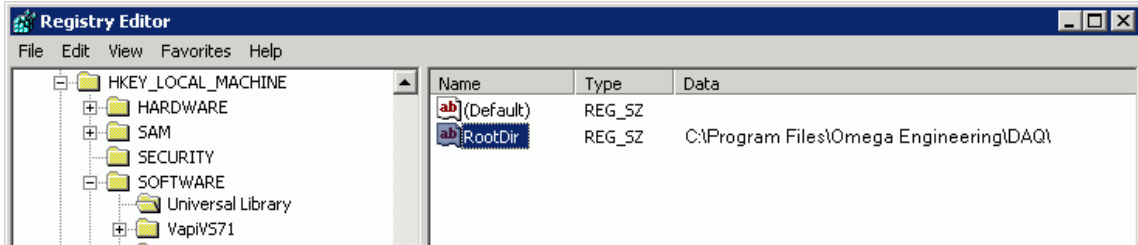

4. Copy CB.CFG (created using InstaCal) to a directory on your hard drive:
 - When running Windows Vista, copy CB.CFG to C:\ProgramData\Omega Engineering\DAQ.
 - When running on Windows platforms other than Windows Vista, copy CB.CFG to C:\Program Files\Omega Engineering\DAQ.


Note: Steps 5 and 6 apply to Windows Vista only. If you are running Windows XP or Windows 2000, proceed to step 7.

5. When running Windows Vista, update the Windows registry to include the following key:

[HKEY_LOCAL_MACHINE]\Software\Universal Library\ConfigDir


6. When running Windows Vista, add a New String Value to the new ConfigDir key:

ConfigDir = C:\ProgramData\Omega Engineering\DAQ. This value sets the directory where the CB.CFG file is created when you run InstaCal.

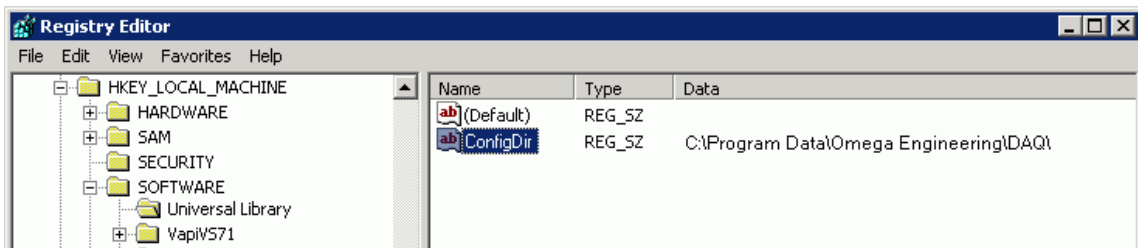

7. Update the PATH environment variable to include the directory containing CBW32.DLL: Edit the following registry key as shown below:

[HKEY_LOCAL_MACHINE]\System\CurrentControlSet\Control\Session Manager\Environment

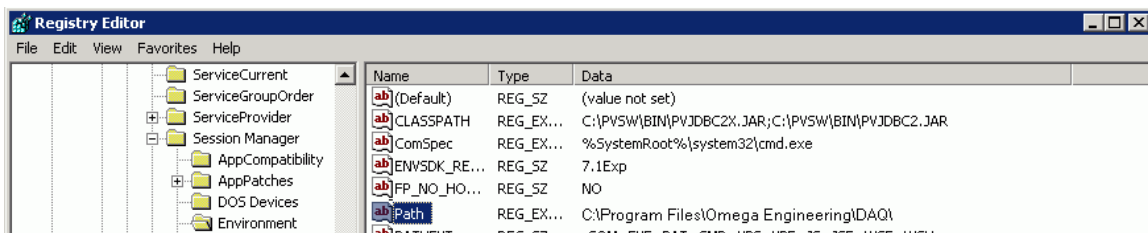


8. Install the device driver files: copy `CBUL32.sys`, `CBULWDM.sys`, `pcidaqlib.sys`, `mccusb.sys`, `usbdaqlib.sys`, and `usblddaqlib.sys` to the System Drivers directory (usually `C:\WINDOWS\system32\drivers`).
9. Update the Windows registry to include the following keys:

```
[HKEY_LOCAL_MACHINE]\System\CurrentControlSet\Services\CBUL32\CBUL32
[HKEY_LOCAL_MACHINE]\System\CurrentControlSet\Services\CBUL32
```

Add the following fields to the `[HKEY_LOCAL_MACHINE]\System\CurrentControlSet\Services\CBUL32` key to include the device driver (`cbul32.sys`). Refer to the image below:

```
DisplayName = Omega Engineering DataAcq
ImagePath = System32\Drivers\CBUL32.SYS
Type = 1
Start = 1
Group = Extended Base
ErrorControl = 1
```

Note that `Type`, `Start` and `ErrorControl` must all be `DWORD` values, while the rest are `String` values.

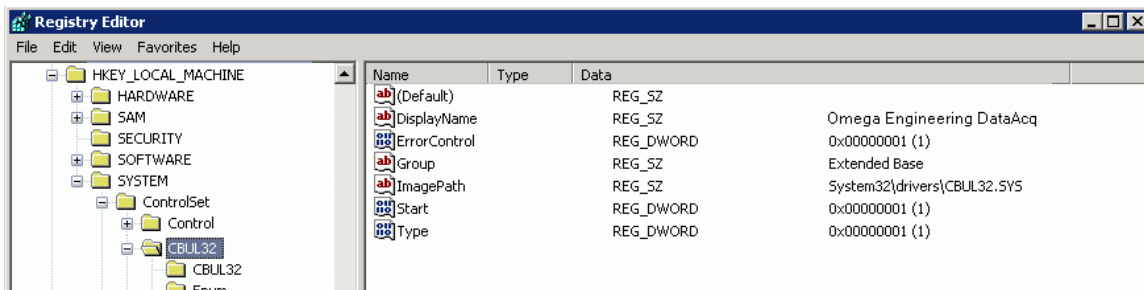

10. Copy `CBI95.INF`, `CBICOM.INF`, and `DAQLIB.INF`, and `MCCUSB.INF` to the Windows INF directory (usually `C:\WINDOWS\inf`).

Note

If you install an Omega Engineering plug-and-play device before you install the device driver, you must find the device in the device manager and update the driver. Refer to the `ReadMe.txt` file for details.

Installing *InstaCal* with the Universal Library

The following instructions are applicable to Windows Vista, Windows XP, and Windows 2000.

The `CB.CFG` configuration file must be available to the Universal Library, and must contain information that is accurate with respect to the installed Omega Engineering devices. We recommend that you run *InstaCal* on each target machine to update the `CB.CFG` when the hardware configuration has changed.

InstaCal also provides field-calibration and testing for Omega Engineering devices. *InstaCal* requires the Universal Library DLL and device driver to be installed, as explained in "Installing the Universal Library for Windows Vista, Windows XP, and Windows 2000" on page 4. To distribute *InstaCal* with your application, add the following files to the distribution:

File description	File name
<i>InstaCal</i> executable	<code>INSCAL32.EXE</code>


File description	File name
InstaCal support files	<ul style="list-style-type: none"> ▪ LOGO.BMP ▪ NDERCODE.TXT ▪ SCANVIEW.EXE ▪ CBI_CAL.DLL ▪ CBI_NODE.DLL ▪ CBI_PROP.DLL ▪ CBI_TEST.DLL ▪ VICOMPONENTS.OCX
System support files	<ul style="list-style-type: none"> ▪ MFC42.DLL ▪ MSVCRT.DLL ▪ OLEPRO32.DLL ▪ OLEAUT32.DLL <p>It is likely that these files already exist on the target machine. Check the version of existing files against those being installed. More recent versions on the target machine should not be overwritten. These files should be installed to the system directory – usually C:\Windows\System32</p>

InstaCal requires the following changes to the Windows registry:

1. Copy the InstaCal files *inscal32.exe*, *logo.bmp*, *ndercode.txt*, *scanview.exe*, *cbi_cal.dll*, *cbi_node.dll*, *cbi_prop.dll*, *cbi_test.dll*, and *vicomponents.ocx* to the C:\Program Files\Omega Engineering\DAQ directory.

2. Create the registry key:

[HKEY_LOCAL_MACHINE]\Software\ComputerBoards

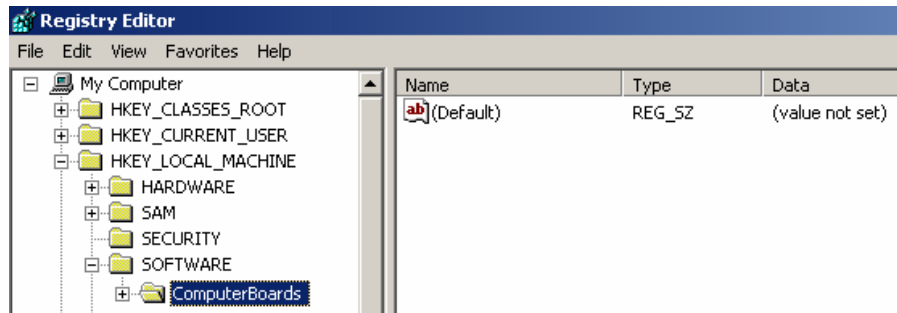

3. Copy the system support files *mfc42.dll*, *olepro32.dll* and *oleaut32.dll* to the system directory – usually C:\Windows\System32.


Note
 The support files *mfc42.dll*, *olepro32.dll*, and *oleaut32.dll* may already exist on the target machine. Do not overwrite them if they are a more recent version than those you are trying to install.

4. The support files *MFC42.DLL*, *OLEPRO32.DLL*, *OLEAUT32.DLL*, and *VICOMPONENTS.OCX* must also be registered. If they already exist on the target machine, they may be in use (and therefore locked). The full installation and registration for some or all of these files may only occur at boot time.

The files can be made to self-register when Windows restarts. Create the following keys under:

[HKEY_LOCAL_MACHINE]\Software\Microsoft\Windows\CurrentVersion\RunOnce
 with these values:

```
CBI1 = C:\Windows\System32\regsvr32 /s C:\Windows\System32\mfc42.dll
CBI2 = C:\Windows\System32\regsvr32 /s C:\Windows\System32\olepro32.dll
CBI3 = C:\Windows\System32\regsvr32 /s C:\Windows\System32\oleaut32.dll
CBI4 = C:\Windows\System32\regsvr32 /s C:\Program Files\Omega Engineering\DAQ\vicomponents.ocx
```

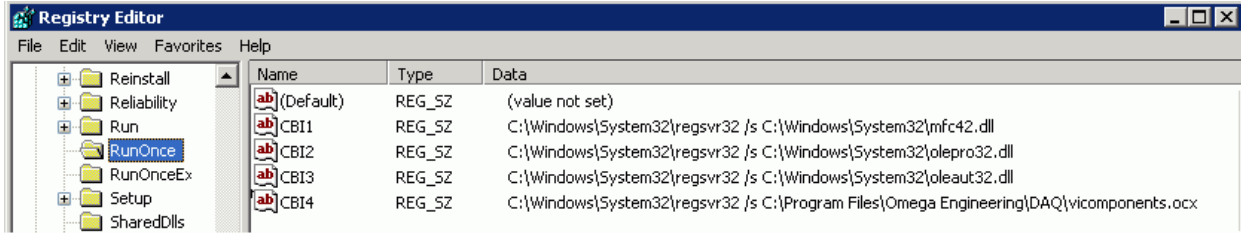

Distribution software also provides solutions to handle the complexity of this situation, providing the capacity to:

- Overwrite only older versions of these files.
- Delay overwriting until restarting Windows.
- Allow the files to self-register upon restart.
- Prompt the user to restart the computer.

The necessary support files will register on startup.

Running a Silent *InstaCal* Installation

Perform a "Silent Install" to use the *InstaCal* installer instead of copying the files and editing the registry yourself. Your installer will launch the *InstaCal* installation, but you will not see the installation window or any prompts from the installation when using the "/qn" parameter.

To include the *InstaCal* setup program, do the following:

1. Add the following to your installation code to launch the file:

```
msiexec /i "path to InstaCal.msi" /qn REBOOT=ReallySuppress
```

2. Place all *InstaCal* files in a folder:

▪ CBI95.IN	▪ logo.bmp
▪ CBICOM.IN	▪ MCCBoardCfg.mde
▪ DAQLIB.IN	▪ ReadMe.txt
▪ ICalUL.msi	▪ ulprops.txt

When performing a silent installation, *InstaCal* installs to the Omega Engineering\DAQ directory in the Program Files directory (usually C:\Program Files\Omega Engineering\DAQ).

The installation will not prompt the user to reboot the computer. Since rebooting is required, the master installation should either prompt the user to reboot or force them to do so.

The CB.CFG configuration file is created the first time that you run *InstaCal*.

- When running Windows Vista, the CB.CFG file is created in C:\ProgramData\Omega Engineering\DAQ. You must be logged into *InstaCal* with Administrative rights in order to make configuration changes.
- When running Windows XP and Windows 2000, the CB.CFG file is created in C:\Program Files\Omega Engineering\DAQ.

Installing Universal Library support for the .NET Framework

The .NET support is an extension of the Universal Library. It requires that both the Microsoft .NET Framework and *InstaCal* or Universal Library be installed. Refer to the previous sections for information about installing *InstaCal* and/or the Universal Library.

To install Universal Library support for the Microsoft .NET Framework, do the following:

1. Install either *InstaCal* or the Universal Library.
2. Copy the .NET Universal Library file `MccDaq.DLL` to your target installation directory.

When `MccDaq.DLL` is in the same directory as your application, you do not need to add it to the Global Assembly Cache.

Tips and techniques

This section includes tips and suggestions regarding common problems that are encountered when deploying an application. This list is intended only to provide guidance to those who are redistributing their applications with the Universal Library, and may not apply to all situations.

Digital signing

In order to avoid "Unknown Publisher" messages when installing a custom application, you should digitally sign the installation driver and application package with your unique Software Certificate. This will notify your customers that you are the author of the software being installed.


Deploying applications with devices that have serial numbers

If the application you are deploying is to be used with a device that has a custom serial number — such as a USB or Ethernet based device — you may need to alter that configuration file to allow it to operate with the device regardless of the serial number.

Note

You only need to alter the configuration file when you install the Universal Library with your installation and are providing your own `CB.CFG` configuration file. If you are installing *InstaCal* and intend on the user running *InstaCal*, you do not need to alter the configuration file.

When a device has a serial number, the configuration file stores the serial number as miscellaneous option 16 (Misc Option [16]). If your device does not have a serial number that matches this configuration item, such as when you run *InstaCal* or replace the device), an error will occur. To avoid this error and force the Universal Library to ignore the serial number of the device, change miscellaneous option 16 to "0" in the configuration file:

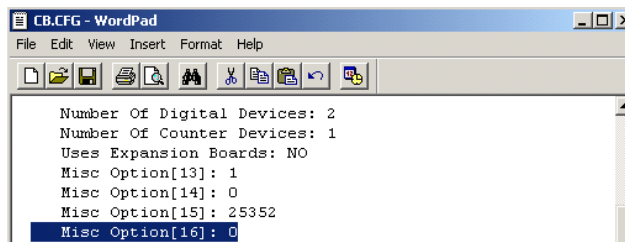

```
CB.CFG - WordPad
File Edit View Insert Format Help
Number Of Digital Devices: 2
Number Of Counter Devices: 1
Uses Expansion Boards: NO
Misc Option[13]: 1
Misc Option[14]: 0
Misc Option[15]: 25352
Misc Option[16]: 0
```

NOTES:

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of **13 months** from date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal **one (1) year product warranty** to cover handling and shipping time. This ensures that OMEGA's customers receive maximum coverage on each product.

If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by OMEGA, if the unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of OMEGA's control. Components in which wear is not warranted, include but are not limited to contact points, fuses, and triacs.

OMEGA is pleased to offer suggestions on the use of its various products. However, OMEGA neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by OMEGA, either verbal or written. OMEGA warrants only that the parts manufactured by the company will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall OMEGA be liable for consequential, incidental or special damages.

CONDITIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS/INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO OMEGA, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM OMEGA'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting OMEGA:

1. Purchase Order number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult OMEGA for current repair charges. Have the following information available BEFORE contacting OMEGA:

1. Purchase Order number to cover the COST of the repair,
2. Model and serial number of the product, and
3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

OMEGA is a registered trademark of OMEGA ENGINEERING, INC.

© Copyright 2010 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.

Where Do I Find Everything I Need for Process Measurement and Control? **OMEGA...Of Course!** *Shop online at omega.comSM*

TEMPERATURE

- ☑ Thermocouple, RTD & Thermistor Probes, Connectors, Panels & Assemblies
- ☑ Wire: Thermocouple, RTD & Thermistor
- ☑ Calibrators & Ice Point References
- ☑ Recorders, Controllers & Process Monitors
- ☑ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☑ Transducers & Strain Gages
- ☑ Load Cells & Pressure Gages
- ☑ Displacement Transducers
- ☑ Instrumentation & Accessories

FLOW/LEVEL

- ☑ Rotameters, Gas Mass Flowmeters & Flow Computers
- ☑ Air Velocity Indicators
- ☑ Turbine/Paddlewheel Systems
- ☑ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☑ pH Electrodes, Testers & Accessories
- ☑ Benchtop/Laboratory Meters
- ☑ Controllers, Calibrators, Simulators & Pumps
- ☑ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☑ Data Acquisition & Engineering Software
- ☑ Communications-Based Acquisition Systems
- ☑ Plug-in Cards for Apple, IBM & Compatibles
- ☑ Data Logging Systems
- ☑ Recorders, Printers & Plotters

HEATERS

- ☑ Heating Cable
- ☑ Cartridge & Strip Heaters
- ☑ Immersion & Band Heaters
- ☑ Flexible Heaters
- ☑ Laboratory Heaters

ENVIRONMENTAL MONITORING AND CONTROL

- ☑ Metering & Control Instrumentation
- ☑ Refractometers
- ☑ Pumps & Tubing
- ☑ Air, Soil & Water Monitors
- ☑ Industrial Water & Wastewater Treatment
- ☑ pH, Conductivity & Dissolved Oxygen Instruments